



Open the flap holding the roll of paper in place.

Remove the empty paper roll and recycle the plastic if possible.



Place the new roll of paper as seen in the picture with the end of the paper going the correct way for the machine. This may change from machine to machine so look in the manual for the correct way to go in.